

XM CD Player



1 Installation

The XM CD Player : Front View



1. Connect the mains cable to the IEC mains input socket.



 
2. Connect to the mains outlet on the wall. DO NOT switch on until all input and output connections are made.

2 Output Connections

ANALOGUE OUTPUTS

1. Connect RCA Phono sockets to appropriate line input on the amplifier
2. Make sure right and left channels are properly connected (right channel is marked in red)

Back view of XM CD Player



Back view of XM5 Integrated Amplifier



The XM CD Player: Back View

 


DIGITAL OUTPUTS


Connect the digital outputs either to:

- An external digital to analogue converter (DAC)
- OR
- An amplifier equipped with a coaxial or optical digital input

Back view of XM CD Player



Back view of XM5 Integrated Amplifier

 

Option shown above is coaxial to coaxial connection

3 Operation



1. Gently slide the lid open to insert the CD, then put the CD Puck on top of the CD and gently slide the lid closed. The display will turn off when the lid is open and will light up when the lid is closed.



2. Ensure that the volume control of your amplifier is set to minimum.



3. Press the power button.

The LED power indicator will light up and the display will illuminate.

4 Function Controls



- STOP** Stops disc playback
- PLAY/PAUSE** Starts disc playback
Pressing **Play/Pause** while a disc is playing will pause playback
Pressing **Play/Pause** again will resume playback
- |<<** Selects the previous track in sequence
- >>|** Selects the next track in sequence

Quick Start Manual

Thank you for purchasing the Exposure XM CD Player
www.exposurehifi.com

Contents & before you start

Please check the contents in the box:



Exposure XM CD Player



HS3 Remote Control
(Batteries not included)



Mains Cable



CD Puck

Before you start



Please note that your Exposure XM CD Player may take up to 48 hours to 'run-in' before reaching its optimal performance. Each subsequent 'run-in' will then take about 20 minutes.

5 Remote Control



- DISP** Press once to turn display off. The display will stay off until another button is pressed, and it will then go off again after a short delay.
- PROG** Programmable track selection
- RDM** Random track selection
- TIME** Track time countdown
- RPT** Track/disc repeat
- 1-9, +10** Direct access track functions
- <<<** Selects the previous track in sequence
- >>>** Selects the next track in sequence
- ||** Pauses playback, to resume play press again or press the 'Play' button
- ▶** Starts disc playback
- Stops disc playback
- ◀** Press and hold for backward scan
- ▶** Press and hold for forward scan

6 Technical Specifications

Outputs

| | |
|---------------------------|---------------------------------------|
| Output Level | 2V RMS |
| Frequency Response | 20Hz - 20KHz \pm 0.25dB |
| Total Harmonic Distortion | <0.008%, 20Hz - 20KHz, 0dBfs |
| Signal to Noise Ratio | >100dB, A weighted |
| Digital Outputs | SP/DIF, Coaxial and "Toslink" Optical |

General Specifications

| | |
|--------------------|--|
| Mains Supply | 110/120V or 220/240V @ 50/60Hz (factory set) |
| Fuse | T2AL for 110/120V units T1AL for 220/240V units |
| Power Consumption | <15W |
| Dimensions (WxHxD) | 218mm x 94mm x 348mm |
| Net Weight | 4kg |
| Gross Weight | 5kg |

7 Safety

Incorrect installation or inappropriate use of the XM CD Player may result in injury due to electrical shock.

- Ensure that the voltage rating on the rear panel of this unit matches that of your local mains supply*
- Ensure that the mains cable and plug supplied with this unit are also correct. (Contact your dealer immediately if this is not the case).
- This unit is protected by a mains fuse, which is accessible as part of the IEC socket on the rear panel.
- Fuse replacement specifications:
110/120V units T2AL fuse
220/240V units T1AL fuse
- Protect the unit against all forms of liquid. Never expose the unit to dripping or splashing, or place objects filled with water; such as vases, on the unit.
- Unplug the unit from the mains when not in use for prolonged periods.
- Do not open this unit - there are NO user serviceable parts inside.
- Set the Amplifier volume control to minimum before turning this unit on or off.
- Ensure that this unit is switched off when connecting or disconnecting speaker and interconnect cables.

* Contact your Exposure dealer or distributor for advice on moving your equipment to another country or territory.

8 Caution

For a long and trouble-free life of your XM CD Player, please ensure the following:

- Do not apply labels or stickers to CDs.
- Do not write on CDs.
- Do not use abrasive or solvent-based cleaning fluids on the surface of CDs or on the CD Player's case.
- Do not remove the cover of the CD Player or dismantle the case.
- Protect unit against all forms of liquid. Never expose unit to dripping or splashing, or place objects filled with water, such as vases, on the unit.
- Do not operate the CD Player in a damp environment or allow liquids to enter the unit.
- Do not attempt to bypass the mains fuse or replace the fuse with one of a different specification.

Failure to observe these precautionary measures may void your warranty.

9 Product Disposal Instructions



The symbol shown here and on the product means that the product is classed as electrical or electronic waste and should not be disposed of with other household waste at the end of its working life.

The Waste of Electrical and Electronic Equipment (WEEE) Directive (2012/19/EU) has been put in place to recycle products using the best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid increasing landfill.

When you have no further use for this product, please remove any batteries and dispose of them and the product as per your local authority's recycling process.

For more information please contact your local authority or the retailer where the product was purchased.

10 Warranty/Guarantee

1. The Exposure warranty entitles you to FREE repair of this unit for the first three (3) years from the date of purchase. This covers parts and labour but excludes carriage.
2. This warranty is valid only if the unit is purchased from an authorised Exposure dealer in your country of residence.
3. It is recommended to register the warranty using the form on our website:
www.exposurehifi.com/warranty
4. The distributor accepts no responsibility for defects arising from accident, misuse, abuse, wear and tear, neglect or through unauthorised adjustment and or repair or replacement of any components, nor will they accept responsibility for damage or loss occurred during transit to or from the person making a claim under warranty.
5. The Exposure warranty covers:
 - **Parts and labour costs for three (3) years from the date of purchase. It does not include carriage to or from the customer**Please retain your original receipt as proof of purchase and purchase date. The guarantee is extended only to the original purchaser and is not transferable.

When making claims under this warranty:

1. The unit should be suitably packed and returned to the dealer from whom it was purchased, together with proof of purchase or a copy of the dated sales receipt. The customer should also include their address and daytime telephone number as well as a description of the fault.
2. If necessary the unit should be sent carriage pre-paid by a reputable carrier, NOT by post.
3. No responsibility is accepted for the unit whilst in transit to the dealer or distributor, and customers are advised to insure the unit against loss or damage whilst in transit.
4. The dealer receipt MUST be produced when making claims against this guarantee.
5. Any tampering or alteration made to the dealer receipt or to the serial number on the unit will invalidate the warranty.
6. The dealer or distributor shall notify the customer when the repairs have been completed. The customer must claim the goods within fourteen (14) days from the date of notice, failing which, the distributor reserves the right to impose storage charges.
7. The distributor reserves the right to dispose of the unit after ninety (90) days from the date of notice in a manner that it sees fit and without compensation to the customer.

