


McIntosh Laboratory, Inc. 2 Chambers Street Binghamton, New York 13903-2699 Phone: 607-723-3512 www.mcintoshlabs.com

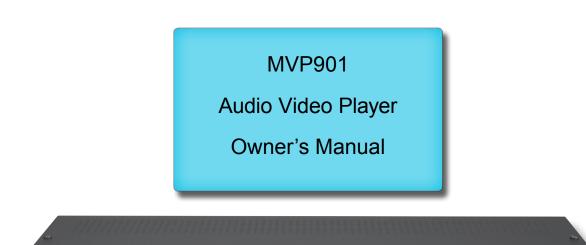





The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

WARNING - TO REDUCE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.



ATTENTION: RISQUE DE CHOC ELECTRIQUE - NE PAS OUVRIR

NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

To prevent the risk of electric shock, do not remove cover or back. No user-serviceable parts inside.


Additional Safety Information is supplied in a separate document "Important Additional Operation Information Guide"

- CAUTION: Invisible Laser Radiation when open. DO NOT stare into the beam or view directly with optical instruments. Use of controls or adjustments or performance of procedures other than those specified in the Owners Manual may result in Hazardous Radiation Exposure.
- ATTENTION: Rayonnnement Laser Invisible en cas d'ouverture. Ne pas regarder dans le faisceau ni observer directement à l'aide d'instruments d'optiques. L'utilisation de commandes, de réglages ou d'instructions autres que ceux spécifiés dans le manuel du propriétaire peut entraîner une exposition x à des rayonnements dangereux


This product incorporates an embedded CLASS 3R Laser (IEC60825-1).

LUOKAN 1 LASERLAITE KLASS 1 LASER APPARAT

- VAROITUS! Laitteen kayttaminen muulla kuin tassa kayttoohjeessa mainitulla tavalla saattaa altistaa kayttajan turvallisuusluokan 1 ylittavalle nakymattomalle lasersateiiylle.
- VARNING! Om apparaten anvands pa annat satt an i denna bruksanvisning specificerats, kan anvandaren utsattas for osynbg laserstraining, som overskrider gransen for laserklass 1.

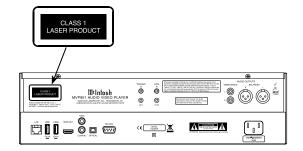

CAUTION: CLASS 3R INVISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO THE BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. AVOID DIRECT EYE EXPOSURE. ATTENTION: RAYONNEMENT LASER INVISIBLE DE CLASSE 3R EN CAS DOUVERTURE. NE PAS REGARDER DANS LE FAISCEAU NI OBSERVER DIRECTEMENT À L'ADE D'INSTRUMENTS D'OPTIQUE. EXPSITION DIRECTE DANGEREUSE DES YEUX.

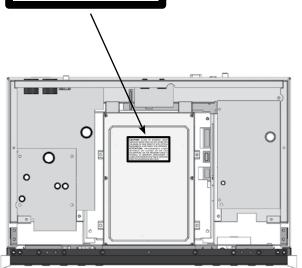

Trademark and License Information

The McIntosh MVP901 incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights.

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual

marks of Dolby Laboratories.

property. Reverse engineering and disassembly are prohibited. "Cinavia" is trademark of Verance Corporation. "VRS ClearView" and "Video Reference Series" are trademarks of Silicon Image, Inc.. DVD Logo is a trademark of DVD Format/Logo Licensing Corp.,

registered in the U.S., Japan and other countries. The MVP901 uses the following Technologies:

Trademark Logo	License Information	Trademark Logo	License Information
Blu-ray Disc Blu-ray 3D M	BD: Supports Blu-ray with Bonus View and BD- Live content, including Blu-ray 3D discs. A 3D- capable display with compatible glasses is required for 3D playback. BD-R/RE, both single- and dual- layer are also supported.	Сts-но Master Audio	DTS products associated with this logo are (1) con- fidential, proprietary trade secrets, and (2) protected by (a) applicable copyright law and (b) European patent numbers 0864146 and 1741093 and U.S. patent numbers 5,956,674, 5,974,380, 5,978,762, 6,487,535, 6,226,616, 7,212,872, 7,003,467, 7,272,567, 7,668,723, 7,392,195, 7,930,184,
Blu-ray 30 TM	 "Blu-ray 3DTM" logo is a trademark of Blu-ray Disc Association. DVD Logo is a trademark of DVD Format/Logo Lignment of Comparison and Lignment of DVD Format/Logo 		7,333,929 and 7,548,853, as well as other U.S. and international patents both issued & pending. DTS, the Symbol, and DTS and the Symbol together are registered trademarks of DTS, Inc. © DTS, Inc. All Rights Reserved.
	Licensing Corp., registered in the U.S., Japan and other countries.		Designed for Windows Media, Microsoft, HDCD,
	DVD: Plays commercially-released DVDs, as well as finalized DVD±R/RW.	Windows Wedia [™]	and the HDCD logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
DVD	DVD-A: High-resolution stereo or multi-channel audio. Some DVD-Audio discs also contain a DVD-Video portion.		"AVCHD" and the "AVCHD" logo are the trade- marks of Panasonic Corporation and Sony Corpora- tion.
A U D I O TM	HDMI: the HDMI logo and High- Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.	SUPER AUDIO CD	Super Audio CD, SACD and the SACD logo are joint trademarks of Sony Corporation and Philips Electronics N.V. Direct Stream Digital (DSD) is a trademark of Sony Corporation.
Java Java	Java and all other trademarks and logos are trade- marks or registered trademarks of Sun Microsys- tems, Inc. in the United States and/or other coun- tries.	COMPACT COMPACT DIGITAL AUDIO	CD: Supports standard Red Book CDs, as well as HDCD and CD-R/RW.
	Manufactured under license from Dolby Labora- tories. Dolby and the double-D symbol are trade- marks of Dolby Laboratories.		

Thank You

Your decision to own this McIntosh MVP901 Audio Video Player ranks you at the very top among discriminating music listeners. You now have "The Best." The McIntosh dedication to "Quality," is assurance that you will receive many years of visual and musical enjoyment from this unit.

Please take a short time to read the information in this manual. We want you to be as familiar as possible with all the features and functions of your new McIntosh.

Please Take A Moment

The serial number, purchase date and McIntosh Dealer
name are important to you for possible insurance
claim or future service. The spaces below have been
provided for you to record that information:

Serial Number:	 Tra
Purchase Date:	 Tha Tec
Dealer Name:	 Tab Ger

Technical Assistance

If at any time you have questions about your McIntosh product, contact your McIntosh Dealer who is familiar with your McIntosh equipment and any other brands that may be part of your system. If you or your Dealer wish additional help concerning a suspected problem, you can receive technical assistance for all McIntosh products at:

McIntosh Laboratory, Inc. 2 Chambers Street Binghamton, New York 13903 Phone: 607-723-1545 Fax: 607-724-0549

Customer Service

If it is determined that your McIntosh product is in need of repair, you can return it to your Dealer. You can also return it to the McIntosh Laboratory Service Department. For assistance on factory repair return procedure, contact the McIntosh Service Department at:

McIntosh Laboratory, Inc. 2 Chambers Street Binghamton, New York 13903 Phone: 607-723-3515 Fax: 607-723-1917

Table of Contents

Safety Instructions	2
(Separate Sheet) Important Add	itional
Operation Information	Guide
Trademark and License Information	3
Thank You and Please Take a Moment	4
Technical Assistance and Customer Service	4
Table of Contents	4
General Information	5
USB Memory Drive Information	5
Disc Information	6
Connector and Cable Information	6
Introduction	7
Performance Features	7
Dimensions	8
Installation	9

Connections:

Rear Panel Connectors	10
(Separate Sheet)	Mc1A
Making Connections	

Remote Control:

Remote Control Push-buttons	12
How to Use the Remote Control	13

Front Panel Features:

Front Panel Displays, Push-buttons	
and USB Memory Drive	14
Front Panel Information Display	15

Setup:

Introduction to the MVP901 Setup Mode	16-17
(Separate Sheet)	
Playback Setup Menu Settings	
Video Output Setup Menu Settings	
Audio Output Setup Menu Settings	
Audio Processing Setup Menu Settings	
Device Setup Menu Settings	21
Network Setup Menu Settings	

Operation:

How to Operate MVP901	
(Separate Sheets)	. Mc1C, Mc1D, Mc1E,Mc1F

Additional Information:

Specifications	30
Packing Instruction	31

General Information

- 1. For additional connection information, refer to the owner's manual(s) for any component(s) connected to the MVP901 Audio Video Player.
- 2. The Super Audio Compact Discs (SACD) Audio Signals are converted internally from Digital to Analog.
- 3. A PCM version of the decoded MP3 Signal is available at the Digital Audio Outputs.
- 4. The MVP901 has built-in 192kHz 32-Bit DACs (Digital to Analog Converter) to allow playing of Discs recorded with a higher bit and sample rate, by using the Analog Audio Outputs.
- 5. The DVD-Audio and Super Audio Compact Discs Digital Audio Signal is available via the HDMI Output.
- 6. The MVP901 is designed to playback 3D Bluray Discs. The 3D Digital Video Signal from the MVP901 is available at the HDMI Out connector. It is extremely important for all A/V Components and the HDMI cables used for connections between the MVP901 and the TV/Monitor, meet or exceed the HDMI High Speed Standards for proper 3D Video Playback.
- 7. The MVP901 will pass via the HDMI Connection Dolby Atmos, DTS-X and Auro 3D Digital Sound Tracks for decoding by using the appropriate Audio/Video Control Center.
- 8. HDMI Cable lengths between MVP901 and the Audio/Video Control Center should not exceed 25ft (8.3meters). If there is need to use HDMI Cables longer than 25ft (8.3meters), a high quality in-line HDMI Buffer/Converter would be required for reliable digital signal transmission via the HDMI Connections.

- 9. When connecting the MVP901 to a TV/Monitor or to a Home Theater Audio/Video Processor, use a Monoprice HDMI Cable with a Ferrite Core at both ends, to prevent RF Interference. The Monoprice Cable part number is 2529.
- 10. WARNING: The USB Connectors located on the Front and Rear Panels of the MVP901 are not designed for direct connection to a computer. Connecting them to a computer could result in damage to the MVP901 and/or the computer.
- 11. The MVP901 basic transport functions may also be controlled by using other McIntosh Remote Controls or Keypads thru a McIntosh Control Center or Preamplifier. Refer to the owner's manual(s) supplied with those component(s) for additional operation information.
- 12. PCM (Pulse Code Modulation) is the name given to a specific type of Digital Audio Signal. The CD Audio Disc and the supplemental audio track found on some Blu-ray Discs use the PCM format.
- 13. Sound Intensity is measured in units called Decibels and "dB" is the abbreviation.
- 14. When discarding the unit, comply with local rules or regulations. Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal.
- 15. For additional information on the MVP901 and other McIntosh Products please visit the McIntosh Web Site at www.mcintoshlabs.com.

USB Memory Drive Information

The MVP901 has a Front Panel Slot for accepting USB Memory Drives only. The USB Memory Drive is used in BD-Live and Bonus View Mode when the storage requirements exceeds the internal memory. The USB Drive provides the memory storage needed for the additional program content which is downloaded from the Movie Studio/Record Company via the MVP901 internet connection. It may also be used for playback of Audio and Video Files.

- 1. Before switching On the MVP901 insert the USB Memory Drive into the Front Panel Slot.
- 2. Do not remove the USB Memory Drive until the MVP901 has been switched Off. Removing the USB Memory Drive while the MVP901 is On could result in malfunction or loss of the USB Memory Drive's data.
- 3. USB Memory Drives need to have a storage capacity of 1GB (Gigabit) or greater.
- 4. Before using the USB Memory Drive for storage in the MVP901, it first must be formated on a computer using the FAT32 File System.
- 5. USB Memory Drives inserted into the MVP901 containing MP3, WMA, AAC, FLAC, ALAC, AIFF, LPCM and DSD Sound Track Formats will playback. The MVP901 will play PCM Sound Tracks with High Resolution Sound up to 192kHz 24Bit recording, except for Memory Drives containing multi-session recordings. DSD High Resolution Sound Tracks up to DSD128 will also playback.
- 6. The MVP901 will display Photos using the JPEG File Format.
- 7. Read and follow all instructions provided by the USB Memory Drive manufacturer to prevent damage to the Drive and to the files contained on the Drive.





Disc Information

- 1. Compact Discs that are not round (e.g. Novelty discs with octagonal or heart shapes) will not play properly in the MVP901 and should not be tried, as possible damage may occur.
- 2. The MVP901 Audio Video Player is designed to play all standard CD Audio Discs that conform to the Official Compact Disc Standards which is indicated by the Symbol
- 3. The MVP901 Audio Video Player is designed to play all standard Blu-ray Video Discs that conform to the Official Blu-ray Disc Standards, which do not include Blu-ray UHD 4K Discs.
- 4. The MVP901 will play most of the following discs, however some recorded discs may not be able to play due to the condition of the recording:
- BDs with cartridge DVD-RAMs, HD-DVDs, BD-Video, BD-3D Video, Super Audio CD (SACD), CD-R, CD-RW, Picture CD (Kodak), Fujicolor CD, WMA (Windows), DVD-Audio, DVD-Video, DVD-R, DVD+R, DVD-RW, DVD+RW, DVD-AVCHD Data portion of CD-Extras, some Dual-Discs and Audio discs with copy-protection may not be playable.
- 5. The MVP901 will play CD and Data Audio Discs recorded in the MP3, WMA, AAC, FLAC, ALAC, AIFF, LPCM and DSD Formats. It will also playback PCM Sound Tracks with High Resolution Sound up to 192kHz 24Bit recording, except for discs that contain multi-session recordings. The MVP901 will playback DSD High Resolution Sound Tracks up to DSD128.
- 6. The MVP901 will display Photos in the JPEG File Format from a Disc.
- 7. A Dual-Disc is a two-sided disc with DVD-video on one side and digital audio on the other side. The digital audio side does not meet the technical

specifications of the Compact Disc Digital Audio specifications found in the industry "Redbook"; the MVP901 may not read the CD side of a Dual Disc.

- 8. Several of the DVD. DVD-Audio and SACD performance features available on the MVP901 are active only if the Disc includes the supporting encoded information.
- 9. BD-Video and DVD-Video Discs are designed to only play in certain regions of the world. A region may be a single country or a group of countries. Usually on the back cover of the Video Disc container is a Symbol with either a "Character" or "Number(s)" or the word "All" inside it. The MVP901 is designed to play discs for Regions "A", "1" and "All".
- 10. Certain Dolby Digital and DTS Encoded Discs display their own unique Audio Mode Selection menu, every time the disc is loaded into the player. If you do not make a choice from this menu, the disc will revert to its default Audio Mode when play is started.

Connector and Cable Information

XLR Connectors

Below is the Pin configuration for the XLR Balanced Output Connectors on the MVP901. Refer to the diagram for connection:

PIN 1: Shield/Ground PIN 2: + Output PIN 3: - Output

 


Power Control Connector

The MVP901 Power Control Input/Output Jacks receive/send Power On/Off Signals Power_ when connected to other McIntosh Control Components. A 1/8 inch stereo mini phone plug is used for connection to the Power Control Input/Output on the MVP901.

Data and IR Input Port Connectors

The MVP901 Data In Port receives Remote Control Signals. A 1/8 inch stereo mini phone plug is used for connection. The IR Ports also use a 1/8 inch stereo mini phone plug and allow the connection of other brand IR Receivers to the MVP901.



RS232 DB9 Connector Pin Layout

1. N/C	6. N/C
2. Data Out (TXD)	7. N/C
3. Data In (RXD)	8. N/C
4. N/C	9. N/C
5. Gnd.	



0 0 0 0 0

Note: For assistance in making a RS232 connection between the MVP901 and a Control Unit. contact your McIntosh Dealer and/or the Control Unit Manufacture for assistance.

Introduction

The McIntosh MVP901 Audio Video Player offers the latest in audio/video technology, providing state of the art reproduction of digital video and audio program sources. A full complement of performance features allows for the enjoyment of 3D Blu-ray, Blu-ray, DVD, SACD, DVD-Audio and Audio CD discs. Special Audio and Video formats are also reproduced with flawless realism. The advanced mechanical design of the transport ensures many years of smooth trouble free operation.

Performance Features

Triple Laser Pickup

The MVP901 incorporates three laser elements, with different wavelengths, that are focused through one lens assembly. This unique design allows reading many different types of Audio and Video Disc Formats.

Advanced Transport

The MVP901 has a new vibration-resistant transport with an advanced digital servo for faster, quieter and accurate operation. The fast read speeds help to insure better disc tracking and error correction processing.

• Upscaling to Ultra HD (4K) resolution

The MVP901 has the highest video resolution available, 2,160p/24 frames per second image quality via the HDMI (version 1.4) Video Output. The MVP901 also supports playback of 3D 1080p Blu-ray Discs.

• Video Circuitry

The MVP901 uses the VRS[®] ClearViewTM Video Processor.

• 32 Bit Audio DAC

The MVP901 is equipped with 192kHz 32Bit PCM/ DSD stereo DACs for high fidelity sound. 8 channel D/A converter is used in STEREO QUAD BAL-ANCED mode for 2 channel audio output.

• High Resolution Audio Playback

The MVP901 has the ability to playback Data Discs and USB Data Drives containing up to 192kHz 24Bit High Resolution Sound Tracks including DSD 128 24Bit.

• Balanced Outputs

The MVP901 has Balanced Outputs for the Left and Right Channels when playing a CD/SACD. When a Multichannel Disc is playing, the Balanced Left and Right Outputs provide a two channel mix down of the Multichannel Recording.

• Built-in Dolby True HD and DTS-HD Master Decoders

The MVP901 decodes/downmixes Dolby True HD and DTS-HD Master sound tracks to the two channel output. It also streams Dolby Atmos, DTS-X and Auro 3D Digital Sound Tracks via the HDMI Connection for decoding by using the appropriate Audio/Video Control Center.

• Digital Audio Outputs

There are HDMI, Optical and Coaxial Digital Audio Outputs for external decoding of the various Dolby Digital, DTS Digital Signals, PCM or MP3 Signals from CDs.

• On Screen Setup and Calibration

Loudspeaker Size, Level and Time Delay Adjustments are available for Dolby Digital, DTS Digital, DVD-Audio and SACD Disc Signals and effects the multichannel analog audio outputs.

• Power Control

The Power Control (Trigger) Input connection provides convenient Turn-On/Off of the MVP901 when connected to a McIntosh System with Power Control.

• Remote Control

The Remote Control with illuminated push-buttons, provides control of the MVP901 operating functions. A Data Port Connection to a McIntosh A/V Control Center or Preamplifier allows for convenient system operation using one Remote Control. An External IR Sensor Input allows for remote operation when the MVP901 is located behind closed doors.

• Special Power Supply

A fully regulated Switching Power Supply, with a special R-Core Power Transformer, ensures stable operation even though the power line varies.

• Fiber Optic Solid State Front Panel Illumination


The Illumination of the Glass Front Panel is accomplished by the combination of custom designed Fiber Optic Light Diffusers and extra long life Light Emitting Diodes (LEDs). This provides even Front Panel Illumination and is designed to ensure the pristine beauty of the MVP901 will be retained for many years.





Dimensions

The following dimensions can assist in determining the best location for your MVP901. There is additional information on the next page pertaining to installing the MVP901 into cabinets.

Front View of the MVP901

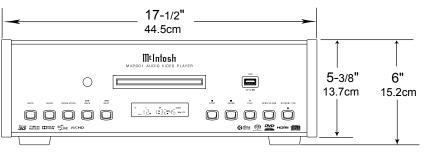

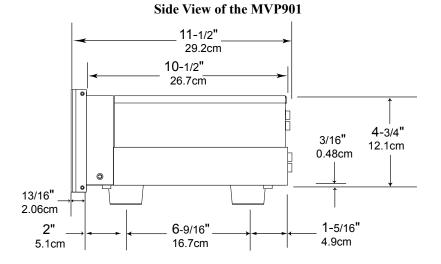

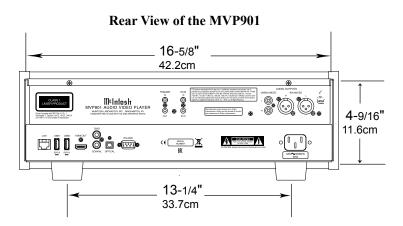



Installation

The MVP901 can be placed upright on a table or shelf, standing on its four feet. It also can be custom installed in a piece of furniture or cabinet of your choice. The four feet may be removed from the bottom of the MVP901 when it is custom installed as outlined below. The four feet together with the mounting screws should be retained for possible future use if the MVP901 is removed from the custom installation and used free standing. The required panel cutout, ventilation cutout and unit dimensions are shown. Always provide adequate ventilation for your MVP901. Cool operation ensures the longest possible operating life for any electronic instrument. Do not install the MVP901 directly above a heat generating component such as a high powered amplifier. If all the components are installed in a single cabinet, a quiet running ventilation fan can be a definite asset in maintaining all the system components at the coolest possible operating temperature.

A custom cabinet installation should provide the following minimum spacing dimensions for cool operation.

Allow at least 6 inches (15.24cm) above the top, 2 inches (5.08cm) below the bottom, 3 inches (7.62cm) behind the rear panel and 2 inches (5.08cm) on each side of the Audio Video Player, so that airflow is not obstructed. **Do not block the ventilation holes on the top and bottom cover.** Allow 1 inch (2.54 cm) in front of the mounting panel for clearance. When the DISC Tray is opened, the panel clearance required in front of mounting panel is 6-3/4 inches (17.2cm). **Be sure to cut out a ventilation hole in the mounting shelf according to the dimensions in the drawing.**

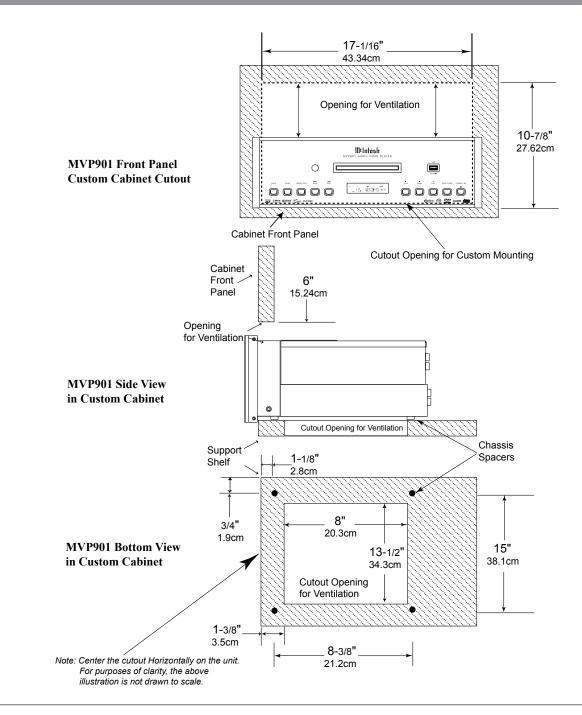

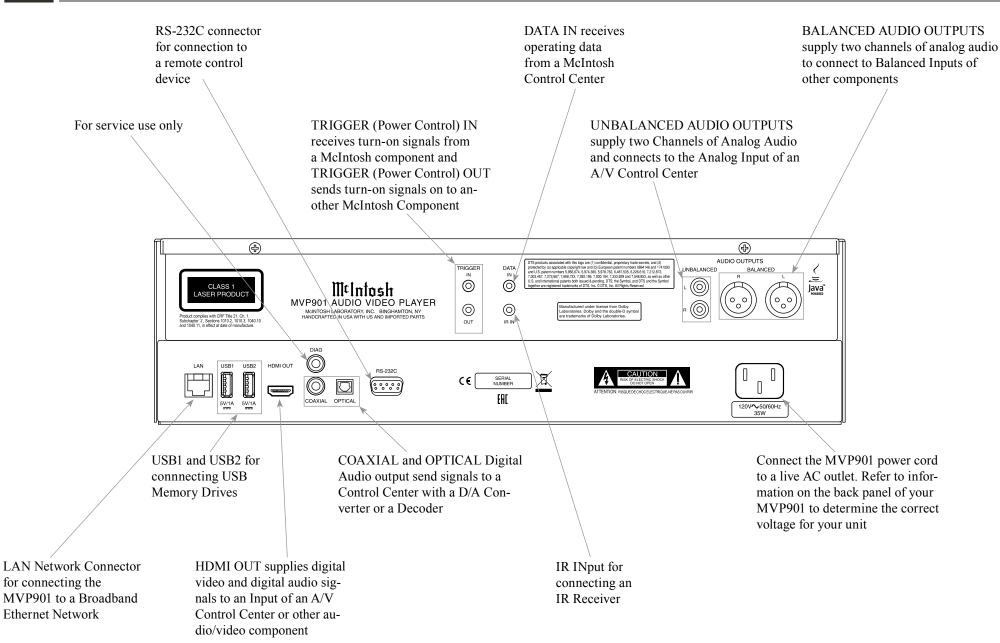

Making Connections

Making Connections

The MVP901 has the ability to be remotely switched On/Off from a McIntosh Preamplifier or A/V Control Center via the TRIGGER (Power Control) connection. The MVP901 Data Port Connection allows for the remote operation of basic functions using the A/V Control Center Remote Control. With an external sensor connected to the MVP901, remote control operation is possible from another room and/or when the MVP901 is located in a cabinet with the doors closed.

The connection instructions below, together with the MVP901 Connection Diagram located on the separate folded sheet "**Mc1A**", is an example of an audio/video system. Your system may vary from this, however the actual components would be connected in a similar manner. For additional information refer to "Connector and Cable Information" on page 6.

Trigger (Power Control) Connections:

- 1. Connect a Control Cable from the A/V Control Center PC (Trigger/ Power Control) "A" Jack to the TRIGGER (Power Control) IN Jack on the McIntosh MVP901 Audio/Video Player.
- 2. Optionally, connect a Control Cable from the MVP901 Audio Video Player TRIGGER (Power Control) OUT Jack to the next McIntosh Component Power Control (Trigger) In Jack.
- 3. Connect any additional components in a similar manner, as outlined in step 2.

Data Control Connections:

4. Connect a Control Cable from the A/V Control Center Data Out 2 Jack to the McIntosh MVP901 Audio Video Player DATA IN Jack.

Sensor Connections:

5. Optionally, connect an external Sensor to the Mc-Intosh MVP901 Audio Video Player IR IN Jack.

HDMI Connections:

6. Connect a HDMI Cable from the McIntosh MVP901 Audio Video Player HDMI OUT to the HDMI Input 3 on the A/V Control Center.

Digital Audio Connections:

7. Connect a Cable from the McIntosh MVP901 Audio Video Player Digital Out COAXIAL connector to the Digital Coaxial In 6 on the A/V Control Center.

Analog Audio Connections:

- Connect Balanced Cables from the McIntosh MVP901 Audio Video Player AUDIO OUTPUTS BALANCED Connectors to the A/V Control Center BAL IN 2 connectors.
- 9. Optionally, connect the MVP901 Audio Video Player AUDIO OUTPUTS UNBALANCED to the A/V Control Center Audio Inputs.

Ethernet Connection:

- 10. Connect a CAT5 or CAT6 cable from the MVP901 ETHERNET connector to a Computer Network with router providing High Speed Broadband Internet Access or directly to a High Speed Modem with Broadband Internet Access.
 - Note: For proper operation of the BD-Live feature a High Speed Internet connection is required.

AC Power Cords Connections:

11. Connect the McIntosh MVP901 Audio Video Player AC Power Cord to a live AC outlet.

		 			 	 	-
		 	 	 	 	 	-
		 				 	-
		 			 	 	-
		 	 		 	 	-
							-
					 		-

	\square	Press the DIM Push-button to adjust the brightness
SHIFT push-button with LED Indicators		of the Front Panel Information Display
used to select a push-button function		· · · · · · · · · · · · · · · · · · ·
with white or gold color nomenclature		Momentarily press to Power ON or OFF
	$\begin{array}{ c c c c c c c c c c c c c c c c c c c$	Womentarity press to rower on or or r
Use to CLEAR the last programmed track		Use to select disc tracks or any numbered operation
	(4) $(\cdot 5 \cdot)$ (6)	
Access the TEXT Display Mode when play-		Press the TOP MENU Push-button to
ing a SACD Disc containing the information	$\left(7\right)$ $\left(8\right)$ $\left(9\right)$	access the main Video Disc Title menu
		(disc dependent), AUDIO indicates the
Circular Push-button to move left, right, up or	CLEAR (0) (+10)	available sound track format options
down through on-screen menu, press the SE-	REVIEW PGM MRKR	Use to access the SETUP Mode
LECT Push-button to choose an option		Ose to access the SET OT Wood
	MENU TEXT SETUP TOP MENU SEARCH AUDIO	Press the MODE Push-button to select Shuffle/
Use to select various disc information, includ-		Random Play, Repeat Play or Program Play Disc
ing TIME, on the Front Panel DISPlay. It is also		Modes during playback of a CD Disc. With a
used to cancel the text display mode on a SACD	SELECT ►	Video Disc playing, press the MODE Push-button
Disc		to select Subtitle Adj., 3D, Zoom, Angle, PIP or
	ZOOM ANGLE	SAP Video Disc Modes Settings
Press to select between various on-screen pages	DISP/ TIME RETURN (MODE)	
of information on Video/Audio Discs, press	PICADJ	Press the RETURN Push-button to return to the
PAGE HOME (-) to activate the Home On-	$\left(\begin{array}{c} \bullet \\ \bullet \end{array} \right) \left(\begin{array}{c} \bullet \\ \bullet \end{array} \right)$	previous video screen display, PIC ADJ offer vari-
Screen Menu		ous On-Screen Video Adjustment Settings
	PAGE SOURCE LEVEL	
	REPEAT RANDOM A-B	Press the LEVEL (–) Push-button to mute or unmute
		the sound
Press to play the Previous Selection. Also		Press to play the NEXT Selection
used to select one of various repeat modes	((()))))	
		Press to FAST-FORWARD thru the current selection
	HDMI MODE	Pless to FAS1-FORWARD this use current selection
	INTRO SUB INPUT	Press to PAUSE playback of a audio track or video chapter
Press to start playback of a		These to TROSE playback of a audio track of video chapter
audio track or video chapter		
		Calcot the annilable Widee Deschrtiser for the calcoted aridee
Press to FAST-REVERSE thru		Select the available Video Resolution for the selected video
the current selection		source
	M¢Intosh	Press to STOP disc playback and SUB is used
	**********	to select Subtitle function

Note: Push-buttons whose function is not identified above are for use with other McIntosh Components

How to use the Remote Control

The Remote Control is capable of performing both basic Operating Functions and Setup Options for the MVP901 Audio Video Disc Player.

Notes: Refer to the "How to Operate" and "How to Operate Setup Mode" Sections of this manual for additional information using this Remote Control.

If the Remote Control seems unresponsive for the desired command, first note the color of the pushbutton nomenclature for the desired command. Then press the SHIFT Push-button to select either white or gold, as indicated by the LEDs, and then within 3 seconds press the desired command push-button.

Play

With a disc loaded, press the PLAY ► Push-button to start the disc playing.

Pause

To temporarily stop disc playback at any time, press the PAUSE II Push-button. To resume playback press either the PLAY ► or PAUSE II Push-button.

Stop

Press the STOP ■ Push-button to stop disc playback and return to displaying the table of contents of the disc.

Numbered Push-buttons

Press 1 through 9 to directly access Tracks on Audio CD and SACD Discs using the Front Panel Information Display. To access track numbers greater than number 9 requires entering both numbers. For example, to access Disc Track/Chapter 23, first press the number 2 Push-button followed by pressing the number 3 Push-button. Note: To direct access Chapters on a DVD and Blu-ray Discs, refer to "How to Operate MVP901" section on page 27.

Reverse and Fast Foward

Press the **(**Reverse) or **)** (Fast Forward) Push-button to start moving rapidly through a track/chapter on the disc. When the desired location is reached, release the **(**Reverse) or **)** (Fast Forward) Push-button to resume normal playback.


Back and Next


Press the M (Next) Push-button to move forward one track/chapter or the M (Back) Push-button to move back to the beginning of the current track/chapter playing. Also used to review the Programmed Tracks from the disc on the Front Panel Information Display, while in the Program Mode.


Note: If the III (Back) Push-button is pressed during playback of the first three seconds of the track, the Disc will start playing back the previous track/ chapter from the beginning.

Display/Time

Press the DISPlay/TIME Push-button to access DVD and Blu-ray Disc Playback Information.

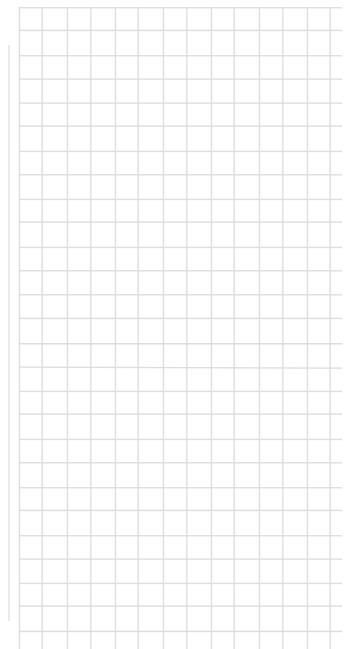

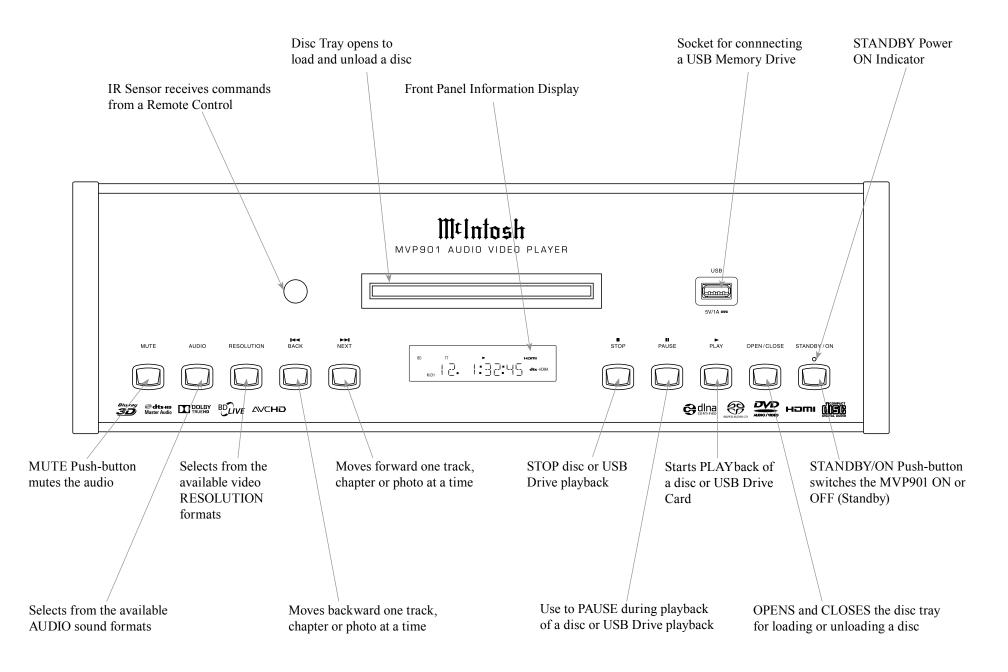

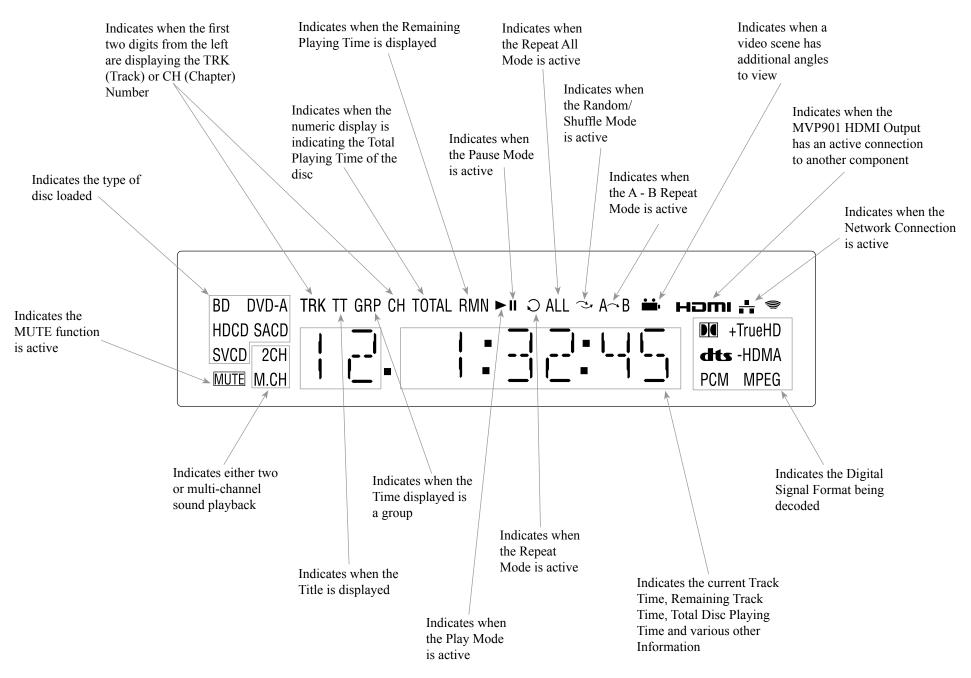


Note: Display items not identified above are for use with other McIntosh Components

Introduction to the MVP901 Setup Mode

Your McIntosh MVP901 has been factory configured for default operating settings that will allow you to immediately enjoy superb video and high fidelity audio from a Blu-ray 3D Disc. It also reproduces Blu-ray Disc (3D & 2D), DVD-Audio, SACDs and CDs with unparalleled sonic purity. If you wish to make changes to the factory default settings perform the following steps, if not proceed to "How to Operate the MVP901" starting on page 24.

Power

The Red LED above the STANDBY/ON switch lights to indicate the MVP901 is connected to AC Power. To Switch ON the MVP901, press the STANDBY/ ON Push-button on the Front Panel or the ((Power) Push-button on the Remote Control. The STANDBY Red LED will flash during the initialization process. Refer to figures 1 and 2.

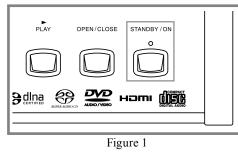

Note: When the MVP901 is switched On. it will take about 20 seconds for initialization of the internal circuitry to take place before the player is ready to begin operation.

Adjustments and Setting changes

All of the adjustments and settings are performed by using the extensive On-Screen Setup Menu System. The On-Screen Setup Menuing System is interactive.

The ability to change a menu item setting or have access to a menu item setting is dependent on the operational state of the player and the choices made in other menu items. Some menu choices require more than one step to complete. The Setup Main Menu Screen Captures (figures 1S thru 7S) are located on the separate folded sheet "Mc1B". Note: The MVP901 must be


connected to a MONI-*TOR/TV* either through an A/V Control Center or directly, for setup and use. The Remote Control supplied with the McIntosh MVP901 has several Push-buttons labeled differently than as indicated on the On Screen Menu. please refer to the Instructions in this Owner's Manual for the correct Push-button to use.

Checking the Network Connection

The following example will illustrate how to navigate through the built-in MVP901 SETUP Mode and the multiple On-Screen Menus.

Occasionally, McIntosh might make available Firmware Updates for the MVP901. These Updates would be from the McIntosh Computer Server via a Network Internet


Connection. When the Firmware Notification is set to

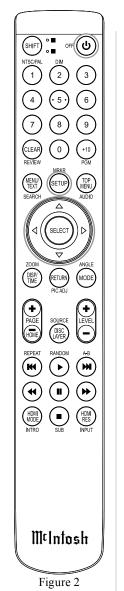

ON (Device Setup Menu figure 5S) the MVP901 will periodically scan for an update. If an update is available, the MVP901 will display a message On-Screen. For more information about the MVP901 and Network Connections refer to pages 11 and 22.

With the MVP901 connected to your Home Network via a Network Router with an active Internet Access Device connected, perform the following steps:

- 1. If there is a disc playing in the MVP901 press the STOP Push-button twice.
- 2. Press the SETUP Push-button on the Remote Control and the Main Setup Menu (Playback Setup) will appear on the Monitor/TV screen. Refer to figure 1S.
- 3. Using the Down▼ Directional Push-buttons on the Remote Control select "Network". Refer to figures 2 and 6S.
- 4. Press the SELECT Push-button on the Remote Control. Refer to figure 3.

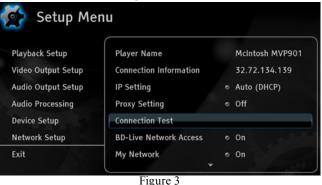

- 5. Using the Down▼ Directional Push-buttons on the Remote Control select "Connection Test".
- 6. Press the SELECT Push-button on the Remote Control. Refer to figure 4.



Figure 4

The MVP901 will now check for a Network Connection first. Second, it will check for access to the Internet. A window will appear On-Screen indicating "Connection Successful!". Refer to figure 5.

layback Setup	Player Name	McIntosh MVP901
a) buch betup	r day er r dan e	internet son internet son
ideo Output Setup	Connection Information	32.72.134.139
udio Out	Connection Test	HCP)
udio Pro	((🎑))	
evice Se		
letwork S	Connection Successful!	
xit	ок	

7. Press the SELECT Push-button on the Remote Control and then press the SETUP Push-button to exit the Setup Mode and return to normal operation.

> Note: If, when the above Connection Test was performed and the message appearing in the Window indicated "Not Connected" proceed to Setup Mode, Network Settings on page 22 to resolve the difficulty.


For the vast majority of MVP901 Owners, the Default Settings and Suggested Component Connections are

all one needs for full enjoyment of movies, still photos, videos and music.

The MVP901 Setup Mode has a number of additional options allowing integration into your Home Theater System. Usually, your McIntosh Dealer and/or Custom Installer uses these additional capabilities.

The navigation and selection methods previously illustrated also apply to the remainder of Setup Mode Settings, which resume on page 18.

To begin enjoying the MVP901 Audio Video Player proceed to page 24 and "How to Operate the MVP901".

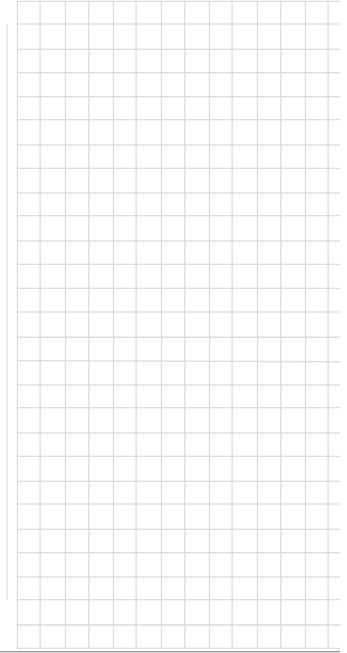

			PLAYBACK SETUP ME	NU
MENU ITEM	SUB MENU	SELECTION	OPTION(S)	DESCRIPTION
Auto Play Mode		•On	Off	Refer to the bottom of Video Screen for Information
Auto Resume		•On	Off	Refer to the bottom of Video Screen for Information
Language				
	Player Language	●English	Deutsch, Francais, Espanol, Italiano, Svenska, Nederlands, Polski, Русский	Refer to the bottom of Video Screen for Information
	Disc Menu Language	●English	Deutsch, Francais, Espanol, Italiano, Svenska, Nederlands, Polski, Русский	Refer to the bottom of Video Screen for Information
	Audio Language	●English	Deutsch, Francais, Espanol, Italiano, Svenska, Nederlands, Polski, Русский	Refer to the bottom of Video Screen for Information
	Subtitle Language	●English	Deutsch, Francais, Espanol, Italiano, Svenska, Nederlands, Polski, Русский	Refer to the bottom of Video Screen for Information
Closed Caption				•
	CC Display	●Off	On	Refer to the bottom of Video Screen for Information
	CC Attribute	●Auto	Custom	Refer to the bottom of Video Screen for Information
	CC Select	•Analog CC1		Refer to the bottom of Video Screen for Information
	Font Color	•White	Black, Red, Green, Blue, Yel- low, Megenta or Cyan	Refer to the bottom of Video Screen for Information
	Font Size	•Standard	Small, Large	Refer to the bottom of Video Screen for Information
	Font Style	•Default	Monospaced with serifs, Pro- portionally spaced with serifs, Monospaced without serifs, Proportionally spaced without serifs, casual font style, Cursive font style, Small Capitals	Refer to the bottom of Video Screen for Information
	Font Opacity	●Solid	Translucent, Transparent	Refer to the bottom of Video Screen for Information
	Font Edge •None		Raised, Depressed, Uniform, Left drop shadowed, Right drop shadowed	Refer to the bottom of Video Screen for Information
	Font Edge Color •White		Black, Red, Green, Blue, Yel- low, Megenta or Cyan	Refer to the bottom of Video Screen for Information
	BG Color	•Black	White, Red, Green, Blue, Yel- low, Megenta or Cyan	Refer to the bottom of Video Screen for Information

Note: The • indicates the default setting

		PL	AYBACK SETUP MENU	, con't
MENU ITEM	SUB MENU	SELECTION	OPTION(S)	DESCRIPTION
Closed Caption, con't			•	•
	BG Opacity	•Solid	Translucent, Transparent	Refer to the bottom of Video Screen for Information
	Window Color		White, Black, Green, Blue, Yel- low, Megenta or Cyan	Refer to the bottom of Video Screen for Information
	BG Opacity	•Solid	Translucent, Transparent	Refer to the bottom of Video Screen for Information
Subtitle Shift		•0	+10 to -10	Refer to the bottom of Video Screen for Information
OSD Position		•0	0 to +5	Refer to the bottom of Video Screen for Information
OSD Mode		●Normal	Minimal, Remaining, Off	Refer to the bottom of Video Screen for Information
Angle Mark		●Off	On	Refer to the bottom of Video Screen for Information
Screen Saver		●On	Off, Energy Saver	Refer to the bottom of Video Screen for Information
Parental Control		•	Enter Password to Activated (exit Setup if you do not want to enter a password)	Refer to the bottom of Video Screen for Information
MENU ITEM	SUB MENU	SELECTION	IDEO OUTPUT SETUP N OPTION(S)	DESCRIPTION
Picture Adjust				
	Picture Mode	• Mode 1	Mode 2, Mode 3	Allows selection between three different preset video settings listed below
	Brightness	• 0	-16 to +16	Allow adjustment of the "Black Level" of the video output
	Contrast	• 0	-16 to +16	Allow adjustment of the "White Level" of the video output
	Hue	• 0	-16 to +16	Allow adjustment of the "Tint" of the video output
	Saturation	• 0	-16 to +16	Allow adjustment of the "Color Level" of the video output
	Detail Enhancement	• 0	-16 to +16	Allow adjustment of the "Picture Sharpness" of the video output
	Edge Enhancement	• 0	-16 to +16	Allow adjustment of the "Object Edge Sharpness" of the video output
	Video Smoothing	• 0	0 to +4	Allow reduction of the "Stair Stepped Effect" of the video output
	Demo Mode	• Off	Off or On	Slip screen comparing VRS Processing (Left Side) to no Processing (Right Side)
Output Resolution		• Auto	Custom	Allows for Automatic or Custom (Manual) selection of Video Screen Resolution
Custom Resolution		• 1080p Auto	UHD Auto, UHD 24Hz, UHD 50Hz, UHD 60Hz, 1080p 24Hz, 1080p 50Hz, 1080p 60Hz, 1080i 50Hz, 1080i 60Hz, 720p 50Hz, 720p 60 Hz, 576p, 576i, 480p, 480i, Source Direct	Allows for Manual selection of Video Screen Resolution

		VIDE	O OUTPUT SETUP ME	NU, con't					
MENU ITEM	SUB MENU	SELECTION	OPTION(S)	DESCRIPTION					
HDMI 1 Setup									
	Color Space		RGB Video Level, RGB PC Level, YCbCr 4:4:4,	Refer to the bottom of Video Screen for Information					
	Deep Color	• Off	36 Bits, 30 Bits (Dithered), 30 Bits, Off (Dithered), Off	Refer to the bottom of Video Screen for Information					
TV Aspect Ratio		• 16:9 Wide / Auto	16:9 Wide	Refer to the bottom of Video Screen for Information					
3D Setting									
	3D Output	• Auto	Off, Forced	Refer to the bottom of Video Screen for Information					
	3D TV Size	• 46	Enter your TV Screen Size	Refer to the bottom of Video Screen for Information					
DVD 24p Conversion		• Off	On	Refer to the bottom of Video Screen for Information					
De-interlacing		• Auto	Film, Video	Refer to the bottom of Video Screen for Information					
		AL	JDIO OUTPUT SETUP	MENU					
MENU ITEM	SUB MENU	SELECTION	OPTION(S)	DESCRIPTION					
Secondard Audio		• Off	On	Refer to the bottom of Video Screen for Information					
HDMI Audio Format		• Auto	LPCM, Bitstream, Off	Refer to the bottom of Video Screen for Information					
S/PDIF Output		• Bitstream	48k LPCM, 96k LPCM, 192k LPCM	Refer to the bottom of Video Screen for Information					
DVD-Audio Mode		• DVD- Audio	DVD-Video	Refer to the bottom of Video Screen for Information					
SACD Priority		• Stereo	CD Mode, Multi-Channel	Refer to the bottom of Video Screen for Information					
SACD Output		• Auto	PCM, DSD	When the MVP901 Optical or Coaxial Outputs are used during playback of a SACD it is important to change the "SACD Output" setting from "Auto" to PCM for playback					
HDCD Decoding		• Off	On	Refer to the bottom of Video Screen for Information					
A/V Sync		• 0	-100ms to +200ms	Refer to the bottom of Video Screen for Information					
		A	UDIO PROCESSING N	IENU					
MENU ITEM	SUB MENU	SELECTION	OPTION(S)	DESCRIPTION					
Dynamic Range Control		• Auto	On. Off	Refer to the bottom of Video Screen for Information					

			DEVICE SETUP MEI	NU					
MENU ITEM	SUB MENU	SELECTION	OPTION(S)	DESCRIPTION					
Firmware Information		MVP901-24-0621	OK, Open Source Credits	To exit the list of Open Source Credits press the RETURN Push-Button					
Firmware Upgrade									
	Via USB			Refer to the bottom of Video Screen for Information					
	Via Disc			Refer to the bottom of Video Screen for Information					
	Via Network			Refer to the bottom of Video Screen for Information					
Firmware Notification		• On	Off	Refer to the bottom of Video Screen for Information					
HDMI CEC		• Off	HDMI 1, HDMI 1 (Limited)	Refer to the bottom of Video Screen for Information					
Standby Mode		 Energy Efficient 	Quick Start	Refer to the bottom of Video Screen for Information					
Auto Power Off		• On	Off	Refer to the bottom of Video Screen for Information					
Sleep Timer		• Off	30 Min, 45 Min, 60 Min, 90 Min, 120 Min	Refer to the bottom of Video Screen for Information					
Front Panel Brightness		• Standard	Dim	Front Panel Information Display Bightness					
Cache Media Info		• Off	On	Refer to the bottom of Video Screen for Information					
Persistance Storage		• •							
	Storage Device	• Internal Flash	USB Drive	Refer to the bottom of Video Screen for Information					
	Space Used	• 0	• 0	Refer to the bottom of Video Screen for Information					
	Erase Persistance Storage	OK	Cancel	Erases all BD-Video data in the Persistance Internal Storage or External USB Storage					
Settings Management									
	Backup Settings			To external USB Storage Device					
	Restore Settings			From external Storage Device					
	Lock Settings	Enter Password		To exit from Enter Password press the RETURN Push-Button					
Reset Factory Defaults		•							
	Erase Accounts and Settings			Returns all settings to Factory Default values and also Erases all Passwords that may have been entered					
	Erase Settings			Returns all settings to Factory Default values and keeps any Passwords that may have been entered					
	Return			Exits out with no changes made					

			NETWORK SETUP ME	NU
MENU ITEM	SUB MENU	SELECTION	OPTION(S)	DESCRIPTION
Player Name		McIntosh MVP901	Press the "SELECT" Push-button	Change the name by using the built-in electronic keyboard
Connection Information				
	Connection Informa- tion	Internet Connection, IP Address, Subnet Mask, Gateway, DNS1, DNS2, Eth- ernet Mac Address		Summary of current network connection
IP Setting (Refer to note 2 below)		• Auto (HDCP)	Manual	Allows for manually entering the IP Address, Subnet Mask, Gateway, DNS1, DNS2
Proxy Settings		• Off	On	Refer to the bottom of Video Screen for Information
Connection Test				Press the SELECT Push-button to start the Internet Connection Test
BD-Live Network Access		• On	Limited, Off	Refer to the bottom of Video Screen for Information
My Network		• On	Off	Refer to the bottom of Video Screen for Information
IP Control		• On	Off	Refer to the bottom of Video Screen for Information

Notes: 1. The • *indicates the default setting.*

2. If the factory default automatic network settings do not allow access to the Internet (use the MVP901 "Connection Test" above for verification of Internet Access) then contact your McIntosh Dealer, Router Manufacture and/or Internet Service Provider for assistance before entering the network settings manually.

																													-	10100
-					 		_		-		_	_		 -		_		_												
		_			 								 	 _					 			_	_	_						
			_										 	 							_	_			_					
-							_		_		_			_														-+		
							_	_	_	_	_	-	 _	 _	_	_	_	_	 	_		_	_	-		-			_	
		_			 								 	 					 			_	_		_					
					 								 	 					 						_					
					 					_		_		 								_	_	_	_					
-													 	 								_	_	_	_					
													 	 											_					
																													\neg	
-							_		_		_	_	 _	_	_	_		_				_	_		-				-+	
	1																													

How to Operate the MVP901

Your McIntosh MVP901 has been configured for default operating settings that will allow you to immediately enjoy superb video and high fidelity audio from a wide variety of discs. If you wish to make changes to the default settings, a Setup feature is provided to customize the operating settings using On Screen Menus (refer to the Setup instructions in this manual starting on page 18). Most operations that can be performed with the Front Panel Push-buttons can also be performed with the Remote Control.

- Notes: 1. Some of the MVP901 operating functions such as Disc Languages, Video Angle or Menu Language are active only if the function is supported by data encoded on the disc.
 - 2. Some Blu-ray discs support BD Live downloads, providing various forms of additional information for the disc currently in the player.
 - 3. When the MVP901 is On and has been idle for approximately 3 minutes, the internal circuitry goes into a Screen Saver Mode. To bring the MVP901 out of hibernation, press a command function such as Play, Open/Close, etc.

Power On


The Red LED above the STANDBY/ON switch lights to indicate the MVP901 is connected to AC Power. To Switch ON the MVP901, press the STADDBY/ ON Push-button on the Front Panel or the (Power) Push-button on the Remote Control. During the initialization process the MVP901 Front Panel Display will inidicate "ON", "MVP901" followed by "HOME". Refer to figures 30, 31 and 40.

Note: When the MVP901 is switched On, it will take about 20 seconds for initialization of the internal circuitry to take place before the player is ready to begin operation.



Home Menu Selection

Besides playing back standard Audio/Video Optical Discs and USB Memory Drives, the MVP901 also incorporates the latest in technology playback of High Resolution Sound Tracks. The type of Playback is performed by "On-Screen Video Displays". Refer to figure 32 for the "HOME" Main display.

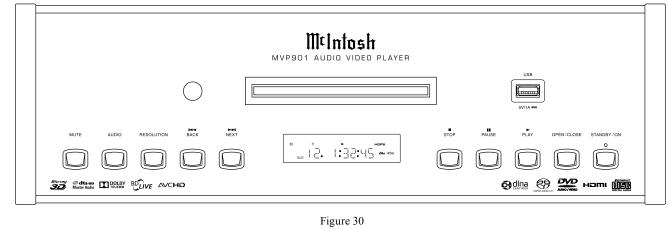

		M¢1r	ıtosh	
No Disc	F			

Figure 32

Refer to the chart below for Icon Identification.

HOME ICON	DESCRIPTION
No Disc	Indicates when a disc has been inserted and the disc type (CD, SACD, DVD, BLU-RAY or DATA)
Music	Indicates playback of music has been selected from either a disc, USB Drive or Network Connected Device
Photo	Indicates viewing of Photos has been selected from either a disc, USB Drive or Network Connected Device
Movie	Indicates playback of movie video has been selected from either a disc, USB Drive or Network Connected Device
Network	Indicates access to folders containing Photos, Music and Videos from Network Con- nected Device
Setup	Indicates access to the MVP901 Setup Menu

Note: Depending on how a given disc has been mastered, the MVP901 Front Panel Display may indicate something different.

How to Load a Disc

- 1. Press the OPEN/CLOSE Push-button. The disc tray will slide out allowing a disc to be loaded. Refer to figures 30 and 32.
 - Note: When the player is in Standby Mode, the MVP901 Power will automatically Switch-On when the OPEN/CLOSE Push-button is pressed.
- 2. Press the OPEN/CLOSE Push-button and the disc tray will close. The MVP901 Front Panel Information Display will indicate "LOAD".
- 3. When the initialization of the Disc has occured, the Front Panel will indicate the disc type (CD, SACD, DVD, DVD-A or Blu-ray) briefly and it will start to play without pressing the PLAY Pushbutton. When a disc containing High Resolution Audio, Photos or Movie (Video) or disc containing combinations is initialized, the Front Panel Information Display will indicate "DATA". To playback those discs, first requires selecting the desired content (Audio, Photo or Movie) using the On-Screen Video Display of the "HOME" Main Icons. Use the ▲▼◀▶ Directional, SELECT and RETURN Push-buttons on the Remote Contol for navigating and selecting Menu Items. Refer to figures 33 thru 40.



Source: Data	Disc View: Songs Genres Artists Folders Albums Playlist	SHIFT Image: Constraint of the second seco
	Figure 37	(CLEAR) = (0) (+10) REVIEW
Source: Data D	visc View: Songs Genres Artists Folders Albums Playlist	REVIEW PGM MRKR OP NENU SEARCH AUDIO
Title: 1KHz-Sine-30sec-c2	Data Disc 1 / 20 IKHz-Sine-30sec-c2-DSD 01_Mahler-Symphony-No-5_Yarlung-Records_Y 02 Aria DSD64 02 Aria DSD128 02 Aria DSD128 02 Aria DXD Celine Dion - Tell Him (Duet with Barbra Streis Celine Dion - The Power of the Dream Celine Dion - The Prayer (Duet with Andrea Boc Lionel Richie - Unknown11 Figure 38	↓ Select ↓ ZOOM ANGLE UBSP RETURN MODE ↓ RETURN ↓ PAGE SUURCE ↓ UBSP CURCE ↓ PAGE SUURCE ↓ REPEAT RANDOM A.8 KH ▶ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓
	02 Aria DSD64.dff	
	 Play 3 / 20 00:00:29 / 00:03:22 	
	Track Type: DSD Figure 39	MtIntosh Figure 40

How to Operate the MVP901, con't

Mute

To Mute the Audio coming from the MVP901 at any time, press the Front Panel MUTE Push-button or the LEVEL (-) Push-button on the Remote Control. When the MUTE function has been activated, the Front Panel Information Display and the On-Screen Video Display Speaker Icon will indicated the MVP901 Audio Output is Muted. Refer to figures 41, 42, 43 and 49. To Un-Mute the Audio press either Push-Button again.

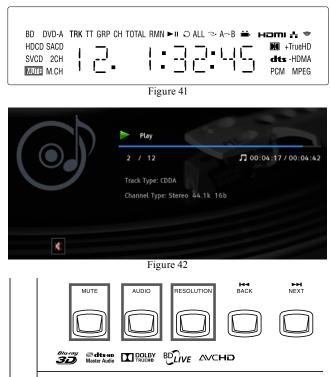


Figure 43

Audio

The MVP901 Front Panel AUDIO Push-button and the Remote Control AUDIO Push-button allows for selec-

tion of the available Sound Format Type and/or the number of Audio Channels. This includes Blu-ray, DVD, DVD -Audio, and SACD Discs. Refer to figures 44, 45, 46, and 47.

Note: When playing back a SACD multi-format (Stereo - 5.1 Channel) Disc, the MVP901 will default to the current SETUP Settings. By pressing the AUDIO Pushbutton the audio default setting will temporarily change while the disc is in the MVP901. If you wish to change the





DVD - AUDIO

Figure 45





default setting when playing all SACD Discs, refer to page 22 "Audio Output Setup Menu", SACD Priority and SACD Output.

Resolution

The MVP901 Front Panel RESOLUTION Push-button and the HDMI RES Push-button on the Remote Control are used to select the Video Resolution based on the capability of the connected TV/ Monitor via the HDMI connection. To change the current On-Screen Video Resolution, either press the RESOLUTION Push-button or the HDMI RES Push-button. Then select from the On-Screen Menu Choices either using the ▲▼ Directional Push-buttons followed by pressing the SELECT Push-button or repeated presses of the HDMI RES Push-button on the Remote Control. Refer to figures 43, 48 and 49.



Additional Operation Functions The MVP901 offers a variety of

The MVP901 offers a variety of Operation Functions implemented by using the Video On-Screen Displays. The following pages contain information on how to use the various Operation Functions. Refer to the Graphic Images located on the separate folded sheets "Mc1C thru MC1F" when using these Operation Functions. SHIFT 이터 () (1) $\binom{2}{2}$ 3 (• 5) 6 (7) (8) 9 $\left(\right)$ MENU/ TEXT SETUP SELEC' ZOOM DISP/ TIME MODE PAGE HOME SOURCE DISC LAYER REPEAT K (M) • `₩

M¢Intosh

Figure 49

		BLU-RAY, D	VD and DVD-AU	DIO OPERAT	ION FUNCTIONS
FUNCTION (Menu Selection)	MEDIA TYPE	ACTIVATION (PUSH-BUTTON)	SEPARATE SHEET NUMBER	GRAPHIC IMAGES	DESCRIPTION
SUBTITLE ADJUST	Blu-ray, DVD	MODE	^{∭(} 1c	208, 218	Selects the desired type of Video Characteristics when On-Screen Subtitle is ac- tive
3D	Blu-ray, DVD	MODE	^{∭⊄} 1c	228, 238	Converts 2D Video to simulated 3D Video. First use the ◀► Directional Push- buttons to select the Menu Setting of "3D". Then use the Directional and Select Push-buttons to make the desired 3D adjustments
ZOOM	All Video Sources	MODE	^{∭ℓ} 1C	248, 258	Provides various image size enlargements and other Zoom functions
ANGLE	Blu-ray, DVD	MODE	^{∭ℓ} 1c	268, 278	When available on the disc, provides different camera positions of the same scene
PIP (Picture-in-Picture)	Blu-ray	MODE	^{∭⊄} 1c	285, 295	When available on the disc and selected by the disc setup menu, provides a smaller window on screen containing different video while the movie is playing
SAP (Separate Audio Program)	Blu-ray	MODE	^{∭ℓ} 1C	308, 318	When available on the disc, provides the ability to select from secondary audio
PICTURE ADJUST	All Video Sources	PIC ADJ	^{∭⊄} 1⊳	328	Provides the storing of three different Picture Modes affecting Video Settings such as Brightness, Contrast, Hue (Tint), Saturation (Color Intensity), etc.
CHAPTER SELECTION	Blu-ray, DVD	SEARCH	∭t 1D	338	Press the SEARCH Push-button twice, wait for three seconds ² , then use the Direction $\blacktriangle \nabla$ Push-buttons to select the desired chapter or enter the directly using the numeric keypad Push-buttons
TIME SELECTION	Blu-ray, DVD	SEARCH	∭t 1D	348	Press the SEARCH Push-button, wait for three seconds ² , then use the Direction ▲▼Push-buttons to select the desired chapter or enter the directly using the numeric keypad Push-buttons
PLAYBACK INFORMATION	Blu-ray, DVD	DSP/TIME	^{∭€} 1D	358	Provides information such as Chapter, Time, Data Rate, Sound Track Type, Sub- title Status, Video Format, Aspect Ratio, etc.
TRACK NUMBER	DVD-Audio	SEARCH	∭t 1D	368, 378	Press the SEARCH Push-button three times ² , then use the Direction $\blacktriangle \nabla$ Push- buttons to select the desired Track (Program) or enter the directly using the numeric keypad Push-buttons
SUBTITLE STATUS	Blu-ray, DVD	DISP/TIME, SUB	ID	38S, 39S and 40S	The On-Screen Subtitle Icon $\bullet \bullet \bullet \bullet$ Off appears indicating the disc contains subtitles (use the DISP/TIME Push-button, refer to figure 38S). Press the SUB Push-button to activate the Subtitle Menu and then select the desired Subtitle by Direction $\blacktriangle \nabla$ Push-buttons followed by SELECT Push-button (refer to figure 39S). Press the DISP/TIME Push-button to verify the change has been made (refer to figure 40S)

Notes: 1. Navigation and Selection of the various On-Screen Menus is accomplished by using the AVAD Directional, SELECT and RETURN Push-buttons on the Remote Control.

2. Some of the Remote Control Push-buttons serve dual functions. Default operational functions are labeled in white and the secondary operation functions are labeled in Gold. When a secondary function is activated, it takes three seconds before the Remote Control returns to the default operating functions.

SACD, CD and USB Drive OPERATION FUNCTIONS												
FUNCTION (Menu Selection)	MEDIA TYPE	ACTIVATION (PUSH-BUTTON)	SEPARATE SHEET NUMBER	GRAPHIC IMAGES	DESCRIPTION							
SHUFFLE/RANDOM	SACD, CD and USB Drive	MODE	^{∭ℓ} 1E	41S, 42S and 43S	Repeated presses of the SELECT Push-button, either selects SHUFFLE or RAN- DOM Playback of music							
REPEAT	SACD, CD and USB Drive	MODE	1E	44S, 45S and 46S	Repeat either the current track or repeat all the tracks. First use the ◀► Directional Push-buttons to select the Menu Setting of "REPEAT". Repeated presses of the SELECT Push-button, either selects REPEAT 1 or REPEAT ALL							
TIME SELECTION	SACD, CD and USB Drive	SEARCH	₩ 1E	47S	Press the SEARCH Push-button, wait for three seconds ² , then use the Direction ▲▼▲▼ Push-buttons to enter the desired time for the current track playing, then press the SELECT Push-button							
PROGRAM PLAY	SACD, CD and USB Drive	MODE	₩ 1E	48S thru 54S	First use the ◀► Directional Push-buttons to select the Menu Setting of "PRO- GRAM PLAY" and press the SELECT Push-button, press the SELECT Push- button then use the ◀► Directional Push-buttons to select the desired track then use the ▼ Directional Push-button to enter the next desired track, Start playback of the Program Play just entered press the ► Push-buttons							
SHUFFLE/RANDOM	High Resoultion Audio Disc and USB Drive	MODE	∭ 1E	55S, 56S and 57S	Repeated presses of the SELECT Push-button, either selects SHUFFLE or RAN- DOM Playback of music							
REPEAT	High Resoultion Audio Disc and USB Drive	MODE	^{∭0} 1F	58S, 59S and 60S	Repeat either the current track or repeat all the tracks. First use the ◀► Directional Push-buttons to select the Menu Setting of "REPEAT". Repeated presses of the SELECT Push-button, either selects REPEAT 1 or REPEAT ALL							
PLAY LIST	High Resoultion Audio Disc and USB Drive	MODE	IF 1F	61S thru 67S	First use the \blacktriangleleft Directional Push-buttons to select the Menu Setting of "ADD TO PLAY LIST" and press the SELECT Push-button and use the \blacktriangle Direction Push-buttons to highlight the first desired track, then press the SELECT Push-button to enter it and a \checkmark checkmark will appear to the left of the On-Screen \triangleright symbol or track number, repeat the same procedure to enter additional desired tracks, to start playback select "GOTO PLAYLIST and press the SELECT Push-button							
SONG LOCATION	High Resoultion Audio Disc and USB Drive	MODE	∭0 1F	68S	To see the progress of the playback using the previously entered GOTO PLAYL- IST, select the "SONG LOCATION" from the MODE MENU							
GAPLESS PLAY	High Resoultion Audio Disc and USB Drive	MODE	IF	69S and 70S	Removes the silent time between tracks during playback (however that is dependent on how the High Resolution Disc or USB Drive was created)							

Notes: 1. Navigation and Selection of the various On-Screen Menus is accomplished by using the AVAD Directional, SELECT and RETURN Push-buttons on the Remote Control.

2. Some of the Remote Control Push-buttons serve dual functions. Default operational functions are labeled in white and the secondary operation functions are labeled in Gold. When a secondary function is activated, it takes three seconds before the Remote Control returns to the default operating functions.

Reset the Microprocessor

Reset of Microprocessors

In the unlikely event the controls of the MVP901 stop functioning, the microprocessors can be reset by performing one of the two methods listed below:

Method One:

With the MVP901 in Standby Mode, press and hold in the Front Panel HDMI RES and MUTE Push-buttons. Release both Push-buttons when the LED above the STANDBY/ON Push-button is extinguished.

Method Two:

Remove AC Power from the MVP901 for at least 15 seconds, then reapply AC Power to the MVP901.

 	 			 			 			 	 	 	_
 	 						 			 		 	_
													_



Audio Specifications

Number of Channels 2 Channel Stereo (Includes Multichannel Down Mix)

Output Level 4.0Vrms Balanced 2.0Vrms Unbalanced

Output Impedance 600 ohms Balanced 600 ohms Unbalanced

Audio Frequency Response (Blu-ray, DVD)

4Hz to 22,000Hz (48kHz Sampling, Linear Audio) 4Hz to 44,000Hz (96kHz Sampling, Linear Audio) 4Hz to 88,000Hz (192kHz Sampling, Linear Audio)

SACD Frequency Response 4Hz to 40,000Hz

CD Frequency Response 4Hz to 20,000Hz

Signal to Noise Ratio 115dB

Dynamic Range 110dB

Harmonic Distortion 0.002%

Channel Separation Better than 110dB (1,000Hz)

Digital Output Coaxial: 0.5V p-p/75 ohm Optical: -15dbm to -21dbm

Video Specifications

Signal System NTSC/PAL

Region Code A, 1

HDMI Connector Version 1.4

HDMI Output Supports 3D, Deep Color, x.v. Color, and CEC

Transport Specifications

Transport Laser Beam Wavelength: 630nm/810nm Laser Power: CLASS I

General Specifications

Power Requirements Field AC Voltage conversion of the MVP901 is not possible. The MVP901 is factory configured for one of the following AC Voltages: 100 Volts, 50/60Hz at 35 watts 110 Volts, 50/60Hz at 35 watts 120 Volts, 50/60Hz at 35 watts 220 Volts, 50/60Hz at 35 watts 230 Volts, 50/60Hz at 35 watts 240 Volts, 50/60Hz at 35 watts Standby: less than 0.5 watt Note: Refer to the rear panel of the MVP901 for the correct voltage.

Overall Dimensions

Width is 17-1/2 inches (44.5cm) Height is 6 inches (15.4cm) Depth is 13-1/2 inches (34.3cm) including connections Note: When the Disc Tray is opened, the panel clearance required in front of mounting panel is 6-3/4 inches (17.2cm).

Weight


19.5 pounds (8.8Kg) net, 35.9 pounds (16.3Kg) in shipping carton

Shipping Carton Dimensions

Width is 26-1/2 inches (67.3cm) Depth is 24-1/4 inches (62.2cm) Height is 11-3/4 inches (29.9cm)

Packing Instructions

In the event it is necessary to repack the equipment for Part Number Ouantity Description shipment, the equipment must be packed exactly as Shipping carton only 033838 1 shown below. It is very important that the four plas-4 033837 End cap tic feet are attached to the bottom of the equipment. This will ensure the proper equipment location on the Inside carton only 1 033836 bottom pad. Failure to do this will result in shipping 033725 1 Top pad damage. 1 034301 Bottom pad Use the original shipping carton and interior parts 2 034446 Foam plug only if they are all in good serviceable condition. If a shipping carton or any of the interior part(s) are 4 017937 Plastic foot needed, please call or write Customer Service Depart-4 400159 #10-32 x 3/4" screw ment of McIntosh Laboratory. Refer to page 4. Please 4 404080 #10 Flat washer

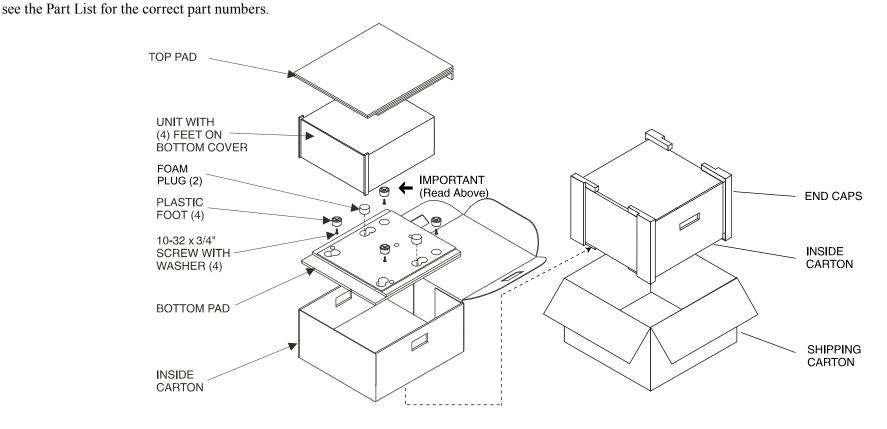



McIntosh Laboratory, Inc. 2 Chambers Street Binghamton, NY 13903 www.mcintoshlabs.com

The continuous improvement of its products is the policy of McIntosh Laboratory Incorporated who reserve the right to improve design without notice. Printed in the U.S.A.