


CONNECTING



Reminder: Do not make any connections when your device is turned on.

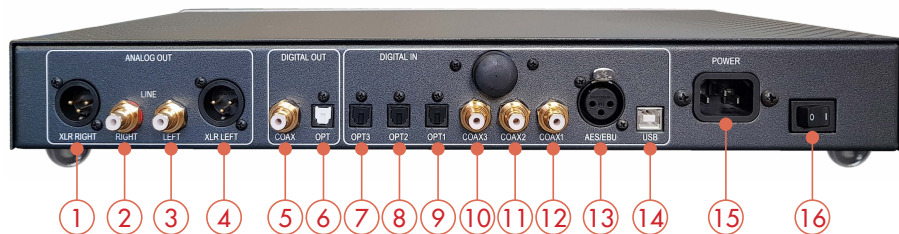

- | | |
|-------------------------------|--------------------------------|
| 1) XLR output (Right). | 9) Digital input 1 (optical). |
| 2) Analog output (Right). | 10) Digital input 3 (coaxial). |
| 3) Analog output (Left). | 11) Digital input 2 (coaxial). |
| 4) XLR output (Left). | 12) Digital input 1 (coaxial). |
| 5) Digital output (coaxial). | 13) AES input. |
| 6) Digital output (optical). | 14) USB input (type B). |
| 7) Digital input 3 (optical). | 15) Power plug. |
| 8) Digital input 2 (optical). | 16) Switch ON/OFF. |

DETAIL OF FUNCTIONS



- 17) Sources selection keys.
 18) Filters setup keys (see details beside): selection is made with keys (17).
 19) Headphones output (jack 3,5mm) (linking the headphones shut down the Output signals).
NB : When you connect a headphones, regardless of the BY-PASS mode, you'll switch to volume management mode (BY-PASS OFF) in order to manage the volume level of the headphones.
 20) Display: selected source shows on the left and frequency sampling on the right. When no signal is detected display shows UNLOCK.
 21) Volume control keys ⊖ & ⊕ (when BY-PASS OFF) from 0 to 80
 22) ON/stand-by key.

REMOTE CONTROL

The remote control is equipped with 2 Lithium CR2025 batteries. This remote control is also able to drive all others ATOLL's products: CD players; Tuner; Integrated or Preamplifier. (See those manuals for details).

- 23) Volume keys ⊕ & ⊖(*).
 24) Standby/ON key.
 25) Source selection keys ⊕ & ⊖.





(*) Volume control is possible only when BY-PASS OFF. When changing the volume, level is displayed shortly, then the display shows the sampling frequency.

BLUETOOTH®

Your appliance allows the reception of audio signals sent since any devices having a Bluetooth transmitter (Smartphone, tab, computer...).

First time association:

- Activate the Bluetooth® connectivity of your emitter device.
- Select the Bluetooth® (BT) input of DAC200 Sig: unlock symbol  appears.
- Select your appliance on the list of possible receiver (named DAC200 Sig).
- Once the connection is made, the lock symbol  appears.

The whole audio signals of your device source will then be transmitted towards your DAC200 Sig. Your emitter device will remain associated until you unlock the DAC200 Sig with your Smartphone or switch off your amplifier.

Association of another emitter:

- To connect another emitter, you'll need to disconnect the first emitter. The quality of reception of the signal depends on the power of the Bluetooth emitter and the distance between the 2 devices.

Avoid being more than 5 meters of your DAC200 Sig for a correct reception without any risks of signal cuts.

FILTERS SETUP

While pressing key (18) you can choose different kinds of digital filters which you can select with the 17's keys:

- Standard: fast roll-off, minimum phase filter
- Fast lin: fast roll-off, linear phase filter
- Slow min: soft roll-off, minimum phase filter
- Slow lin: soft roll-off, linear phase filter
- Apodizing: fast roll-off by apodizing and linear phase filter
- Hybrid: fast roll-off and minimum phase filter

BY-PASS MODE

This DAC can be used as:

- Single converter as a source linked to a LINE or XLR input of an integrated or preamp which will setup the volume control. In that case you'll need to fix the output level of the DAC200 Sig and put it on BY-PASS position.
- Both converter and preamp directly linked to a power amplifier: volume control is then made by the DAC200 Sig. In this configuration, you need to place configuration as BY-PASS OFF.

Put the DAC200 Sig on stand-by then press together keys (21) about 3 seconds. Position ON/OFF changes on every press of the knob.



- Display BY-PASS means that the volume control is not activated.
- Display BY-PASS OFF means that the volume control is activated.

Note : BY-PASS mode is recommended when you're using an integrated. If you are using the DAC200 Sig as a preamp, check if the amplifier is able to support a maximum input level of 5 Vrms.

USB INPUT

Your appliance is equipped with a High-Res. asynchronous USB Input (B type). It will be possible to use it only when you'll have downloaded the appropriate driver on your computer. This driver can be freely downloaded on our website at the page:



<http://www.atoll-electronique.com/fr/produits/convertisseur-dac/convertisseur-dac200/>

You will find attached an explanatory guide on how to install this driver.

This driver is not required for Macintosh computers.

To avoid any troubles in the transfer of High Resolution files (DSD & 24 bits/192 kHz), it is recommended to use a USB interconnect with ferrite.



ACCEPTED FORMATS

- Accepted format on optical and coaxial Inputs: 16-24 bits (32 kHz, 44,1 kHz, 48 kHz, 88,2 kHz, 96 kHz, 176,4 kHz and 192 kHz).
- Accepted format on USB Input:
 - DSD: DSD64 & DSD128.
 - PCM : 16-24 bits (32 kHz, 44,1 kHz, 48 kHz, 88,2 kHz, 96 kHz, 176,4 kHz, 192 kHz, 352,8 kHz et 384 kHz).



CAUTIONS

- **Do not make any connections when your device is powered on.**
- Put your device in a dry and well ventilated place, far from a source of heat.
- Do not put something on your converter.
- Do not make any plug-in when the converter is on.
- Avoid any short-cut.



ADVISES

- To optimize the performance of your device, you should switch it on at least half an hour before any listening, the time for the power stage to reach its ideal working temperature.
- Your device will give you optimal listening quality after this time-lapse.
- Between two uses, it is, therefore, preferable to let the device in the standby position so that it remains at its optimum temperature.
- At night or when you leave your home, it is best to use the main switch to turn off the device.
- To optimize the sound quality of your system, we recommend that you choose good-quality connection cords. Do not hesitate to ask your specialist dealer for advice.
- To avoid any parasite sounds coming from some softwares, we recommend you to unplug the USB cable from your computer when not using it.

E.C. MARKING

E.C. marking certified the conformity with low tension directive 73/23/CEE, directive CEM 89/336/CEE and national transpositions.

GUARANTEE

The guarantee is **two years** long from date of purchase. We recommend you to ask your dealer to fill the guarantee and to conserve it. The guarantee is only available for appliance which have been use correctly.

You have just bought a Digital/Analog converter DAC200 Signature, with exceptional audiophile performances. We really thank you for your confidence in our products. To get the best part of this product, please read carefully this manual.



YOU WILL FIND
ENCLOSED

- A converter DAC200 Signature.
- A powerlead.
- An RCA wire.
- This manual with the certificate of guarantee.

ATOLL ELECTRONIQUE®
is a French Company that designs, manufactures, and
commercializes all its products.





TECHNICAL DATA

Supply:	2×4,6 + 10 VA
Total of capacitors:	20 030 μ F
Frequency response:	5 Hz - 20 kHz
THD at 1 kHz (0 dB):	- 120 dB
Signa/noise ratio:	129 dB
Dynamic:	133 dB
Maximum output level:	2,25 Vrms
Dimensions (mm):	440×293×63
Weight:	5 Kg

(Data subject to change)



WARRANTY FORM ~ DAC200 Signature

To present to your dealer with the invoice when returning back the appliance:

ATOLL ELECTRONIQUE®
Bd des Merisiers
50370 BRECEY
FRANCE

Date of purchase:

Place of purchase:

Buyer signature:

Dealer Stamp

OWNER'S MANUAL

DIGITAL/ANALOG CONVERTER

DAC200 SIGNATURE

